



Solar Lithium Energizer

USER MANUAL

v1.0 04/24

S20

S30

S60

S80



Published by:

Gallagher Group Limited

Kahikatea Drive, Private Bag 3026

Hamilton, New Zealand

am.gallagher.com

Copyright© Gallagher Group Limited 2024

All rights reserved. Patents Pending.


DISCLAIMER: Whilst every effort has been made to ensure accuracy, neither Gallagher Group Limited nor any employee of the company shall be liable on any ground whatsoever to any party in respect of decisions or actions they may make as a result of using this information.

In accordance with the Gallagher policy of continuing development, design and specifications are subject to change without notice.

Developed and manufactured by Gallagher Group Limited, and ISO 9001 2015 Certified Supplier.

Contents

Energizer overview.....	5
Installation instructions	6
Accessories.....	10
Tips & Troubleshooting	11
Care & Maintenance.....	11
Product specifications.....	12
Approvals & standards	13

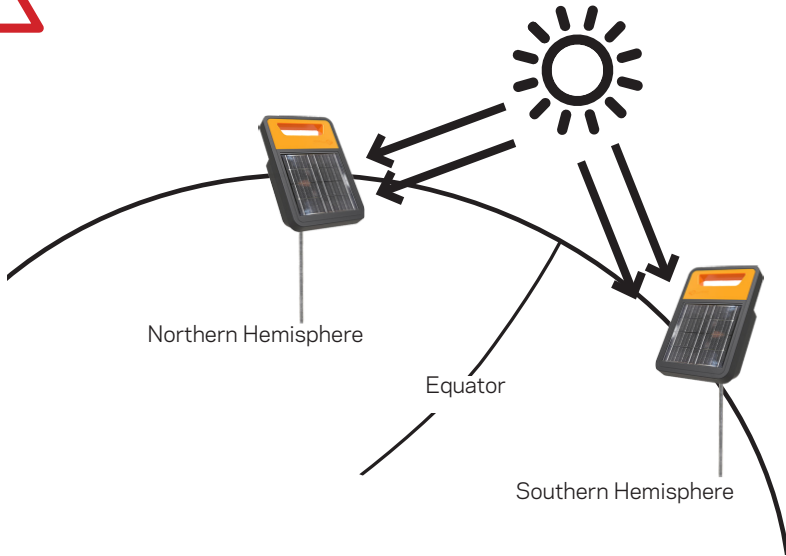

Important: Charge the battery for 1 day in full daylight before first use.



The solar panel should face towards the equator. i.e. in the northern hemisphere, panel faces south, in the southern hemisphere, panel faces north.




1	Solar Panel	Keep clean so battery will charge from the sun	
2	Fence Indicator LED	Green Flashing	Energizer is OK
3	On/Off		
4	Flat Battery indicator LED	Red	Battery is very low or flat. See Tips & Troubleshooting on p. 12.
5	Fence Terminal & Leadset connection	Connects to fence	
6	Earth Terminal & Leadset connection	Connects to earth/ground stake (sold separately)	

Step 1. Charge the Battery


GALLAGHER RECOMMENDS CHARGING BEFORE USE

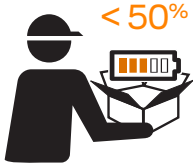

Step 2. Connect Earth and Fence leads

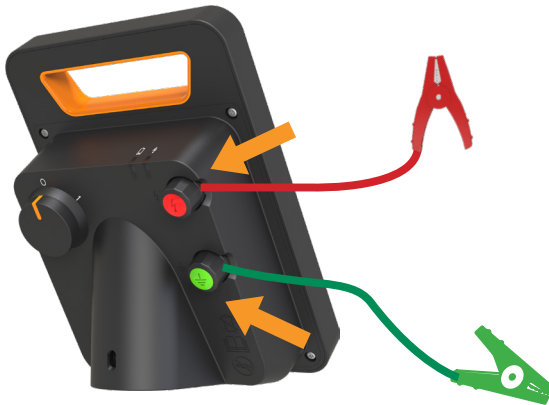

Step 3. Mount the Energizer

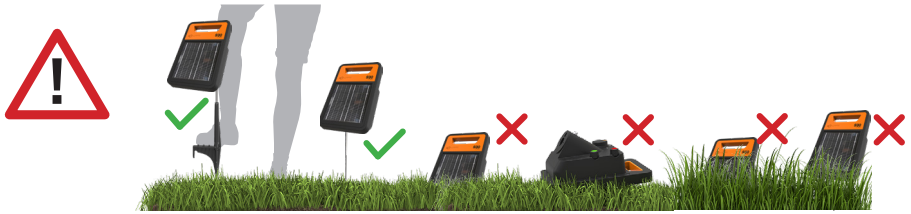

CAUTION:

Do not install energizer on the ground.


Never leave the energizer face down.

Do not install where long grass can cover any part of the solar panel.


a.



b.

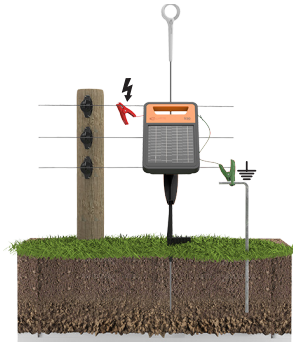

c.

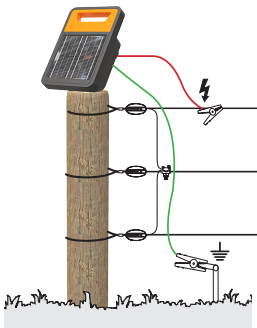


d.



a.



b.

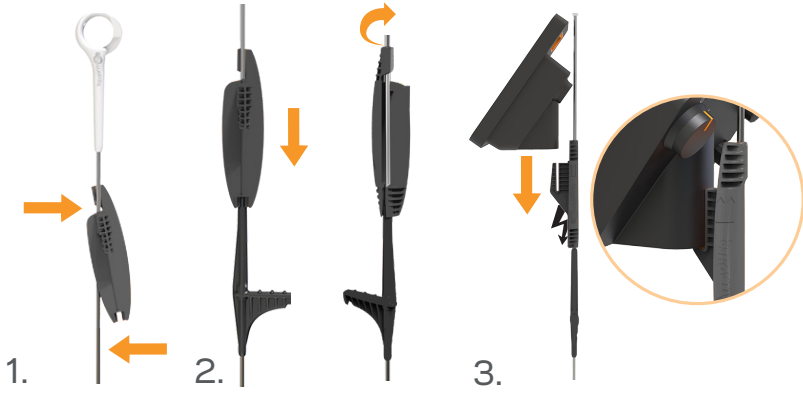

c.



d.



Step 4. Connect Earth and Fence leads to fence








- Connect green terminal to the earth rod inserted at least 2 ft (60cm) into the ground.
- Connect red terminal to fence line.

Important: For Step 3d. ONLY, the earth lead can be connected to the earth screw on the back of the energizer which is touching the earth rod.

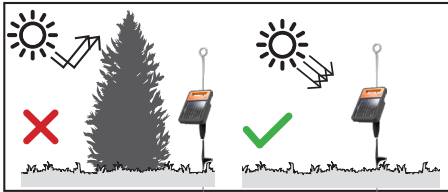Step 5. Turn on energizer

ENG



		Energizer is working
		Battery is flat


Note: The energizer will automatically slow the pulse rate from 1.5 seconds during the day to 2.5 seconds at night, to conserve the battery while live stock are less active.

3 Accessories



G57111

Install the energizer on a Gallagher Ring Top Post using the optional Ring Top Post Mount.



G57112

Install the energizer onto a wooden post or an earth stake using the optional Wood Post/Earth (Ground) Rod Mount.

Behaviour	Problem	Solutions
Battery LED is solid red and Energizer has stopped ticking	Battery capacity is flat due to insufficient sunlight. Battery needs charging.	<ul style="list-style-type: none"> ▪ Ensure energizer is getting enough sun and facing the correct direction. ▪ Ensure energizer is in direct sunlight.
Energizer pulsing slow	Battery capacity is low due to insufficient sunlight.	<ul style="list-style-type: none"> ▪ Turn energizer OFF for 3 days, leave in the sun to charge internal battery.
Battery LED flashing red.	Temperature protection state. Energizer stopped pulsing to protect internal battery	<ul style="list-style-type: none"> ▪ Energizer will self-recover when temperature returns to normal operating range.
Stock getting out	No or low voltage on fence	<ul style="list-style-type: none"> ▪ Check energizer isn't faulty; <ul style="list-style-type: none"> - disconnect from fence and earth - measure across fence and earth terminals with a Gallagher Fence Voltmeter - if less than 5 kV return energizer for service - if more than 5 kV, check the fence for shorts. Add a supplementary ground rod.

- Keep solar panel clean - periodically use a soft cloth with water and a mild detergent.
- Do not expose the energizer to excessive temperatures or fire. (Below -20°C or above 70°C).

Important Battery Information

Recharging the battery	Switch the energizer off. Place in sunlight for 3 days to charge battery.
Storing the energizer	Switch the energizer off. Store in a cool, dry, dark, ventilated area to minimise battery current. Recharge the battery before and after seasonal storage.
Leaking batteries	If battery fluid comes in contact with : Eyes - flush the affected area with water for at least 15 minutes. Ensure adequate flushing by separating the eyelids with fingers. Call a physician. Skin - immediately flush with water and/or soap.
Battery replacement or disposal	This energizer contains a Lithium battery which is not user replaceable. The lithium battery must be replaced by a trained professional using a Gallagher approved lithium battery. Return energizer to a Gallagher Authorised Service Centre for battery replacement or disposal.

**Important:**

- If the battery charge drops to 30% or less, the day pulse rate drops to 3.0 seconds and the night pulse rate will drop to 5.0 seconds.
- Do not dispose of the energizer in a fire.

6**Product specifications**

	S20	S30	S60	S80
Battery Type	Lithium 3.2V 6 Ah	Lithium 3.2V 12 Ah	Lithium 3.2V 12 Ah	Lithium 3.2V 24 Ah
Output voltage (no load)	9.2 kV	9.3 kV	8.8 kV	9.0 kV
Stored Energy	0.21 J	0.3 J	0.6 J	0.8 J
Average Current (Day)	67 mA	100 mA	300 mA	400 mA
Peak Current	325 mA	275 mA	350 mA	450 mA
Dimensions (HxWxD)	190mm x 171mm x 151mm		250mm x 200mm x 195mm	
Weight	1.2 kg / 2.65 lbs	1.4 kg / 3.09 lbs	1.9 kg / 4.19 lbs	2.2 kg / 4.85 lbs
Operating Temperature	-10°C to +50°C / 10°F to +120°F			
Storage Temperature	-20°C to +70°C / -4°F to +158°F			
IP Rating	IPX4			



Important: Changes or modifications not expressly approved by Gallagher Group Limited could void the user's authority to operate this equipment.

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experience radio/TV technician for help.

Waste Electrical And Electronic Equipment



This symbol on the product indicates that this product and with special care, the battery, must not be disposed of with other waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city recycling office or the dealer from whom you purchased the product.